

QWIZDOM Q4 REMOTE

Menu/Power: Press and hold to turn remote on/off. Press to view menu options: *Help, Search, Sess. ID, User ID, and Exit.*

Q#: Displays the current question number.

ID#: Displays the remote ID number.

Battery Power: Appears when battery is low.

Clear: Press to delete the last character or change answer.

Right/Wrong Feedback: Indicates the submitted response was correct (✓), incorrect (X), or received (✓X).

Fraction: Press between two numbers to indicate fraction.

Minus: Press to indicate a negative number.

Send: Press to submit answer, select a menu option, and confirm session or user ID.

Left/Right Arrows: Press to navigate between menu options, answer choices, and questions.

Decimal: Press between two numbers to indicate a decimal.



Common Remote LCD Displays

Find Net	Remote is searching for the host.
Qwizdom	Remote has found the host and is ready for a question slide.
PushKey	Remote is idle. Press any key, except "Menu," to reactivate.
Help	First available Menu option. Press "Send" to ask for help privately or scroll right to "Exit" and press "Send."
Inactive	Remote senses the host is not in use, or does not recognize the session. If remote remains inactive after starting a presentation, press "Menu," scroll right to "Sess.ID," and press "Send." When prompted, reenter the session ID and press "Send" again.
No Net	Remote cannot find the host. Reenter the "Session ID." If "No Net" continues, reenter "User ID" and "Session ID."
Denied	User denied due to incorrect Session ID, User ID, or a duplicate ID.
Loading	Loading an answer key; may take a few moments.
Activity	Requesting an Answer Key activity number. Prompt only appears when multiple test versions are being presented. Activity numbers should be noted on the test sheets before presenting; numbers cannot be viewed while in presentation mode.